

Experts In Home Cleaning™

HEALTHYhome SPOT CLEAN™

USER'S GUIDE

92T7 SERIES 220-240V

- 2 Thank You
- 3 Safety Instructions
- 4-5 Product View
- 6-11 Operations
- 12-13 Troubleshooting
- 14 Replacement Parts
- 14 Accessories
- 15 Warranty
- 16 Consumer Services




Thanks for buying a BISSELL Healthy Home Spot Clean™

We're glad you purchased a BISSELL Healthy Home Spot Clean. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL Healthy Home Spot Clean is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL Healthy Home Spot Clean.

Thanks again, from all of us at BISSELL.

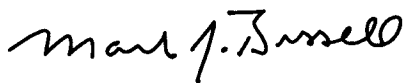

Mark J. Bissell
Chairman, President & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your Healthy Home Spot Clean™.

Always connect to a properly Earthed outlet. Unplug from outlet when not in use and before conducting maintenance or troubleshooting.

 **WARNING:** To reduce the risk of fire, electric shock, or injury:

- Use only BISSELL cleaning products intended for use in this appliance.
- Use indoors only
- Do not use with damaged cord or plug
- Do not service machine when it is plugged in
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard
- Do not use machine if it has been dropped, damaged, left outdoors or dropped into water
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces
- Do not carry the appliance while in use
- Do not unplug by pulling on cord; unplug by grasping plug not the cord
- Do not handle plug or appliance with wet hands
- Do not put any object into appliance openings, use with blocked opening or restrict air flow
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts
- Do not pick up hot or burning objects
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours
- Do not use without tanks in place
- Remove plug from electrical outlet before cleaning or maintaining the appliance

- Not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Young children should be supervised to ensure that they do not play with the appliance
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not modify the Earthed plug
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage
- Keep openings free of dust, lint, hair, etc.
- Keep appliance on a level surface
- Turn off all controls before unplugging
- Be extra careful when cleaning stairs
- Pay close attention when working around children

SAVE THESE INSTRUCTIONS


This model is for household use only.

WARNING:

FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.


If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. Spares may be obtained from your BISSELL supplier. If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a 13 amp socket.

Product view

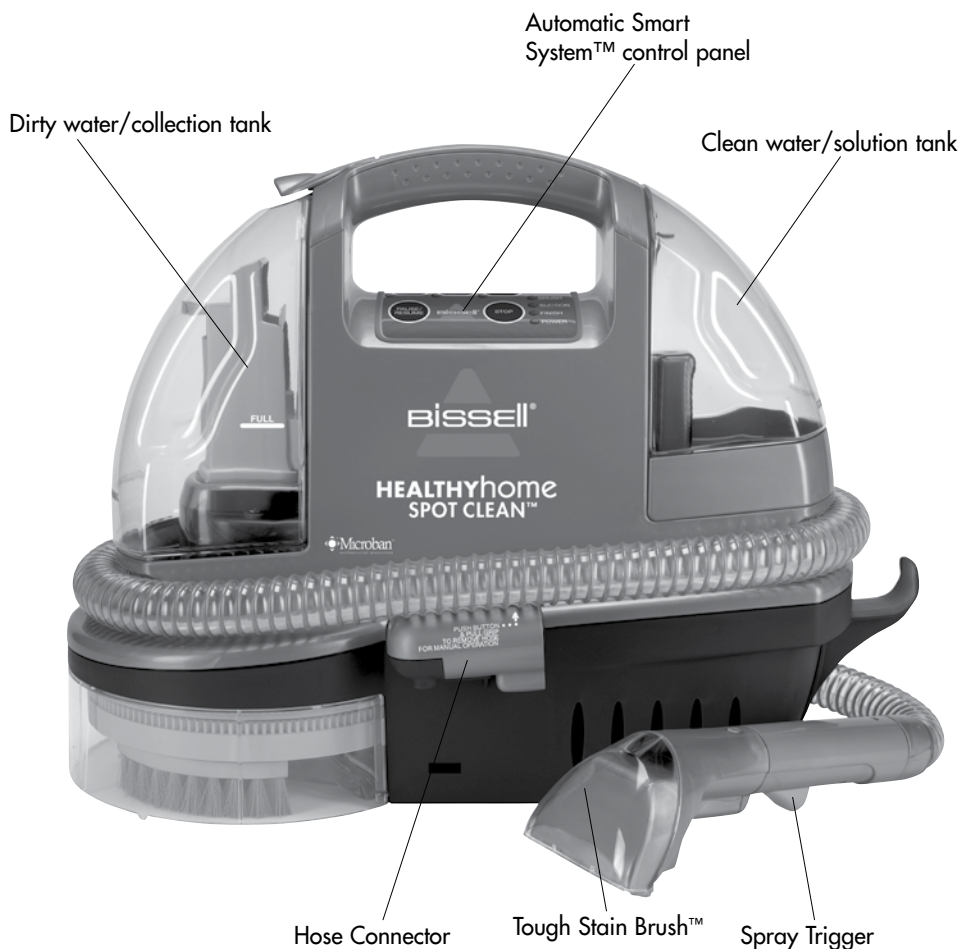

Keep plenty of genuine BISSELL 2X advanced cleaning formulas for compacts on hand so you can clean whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas for compacts. Non-BISSELL cleaning formulas may harm the machine and void the warranty.

Product view

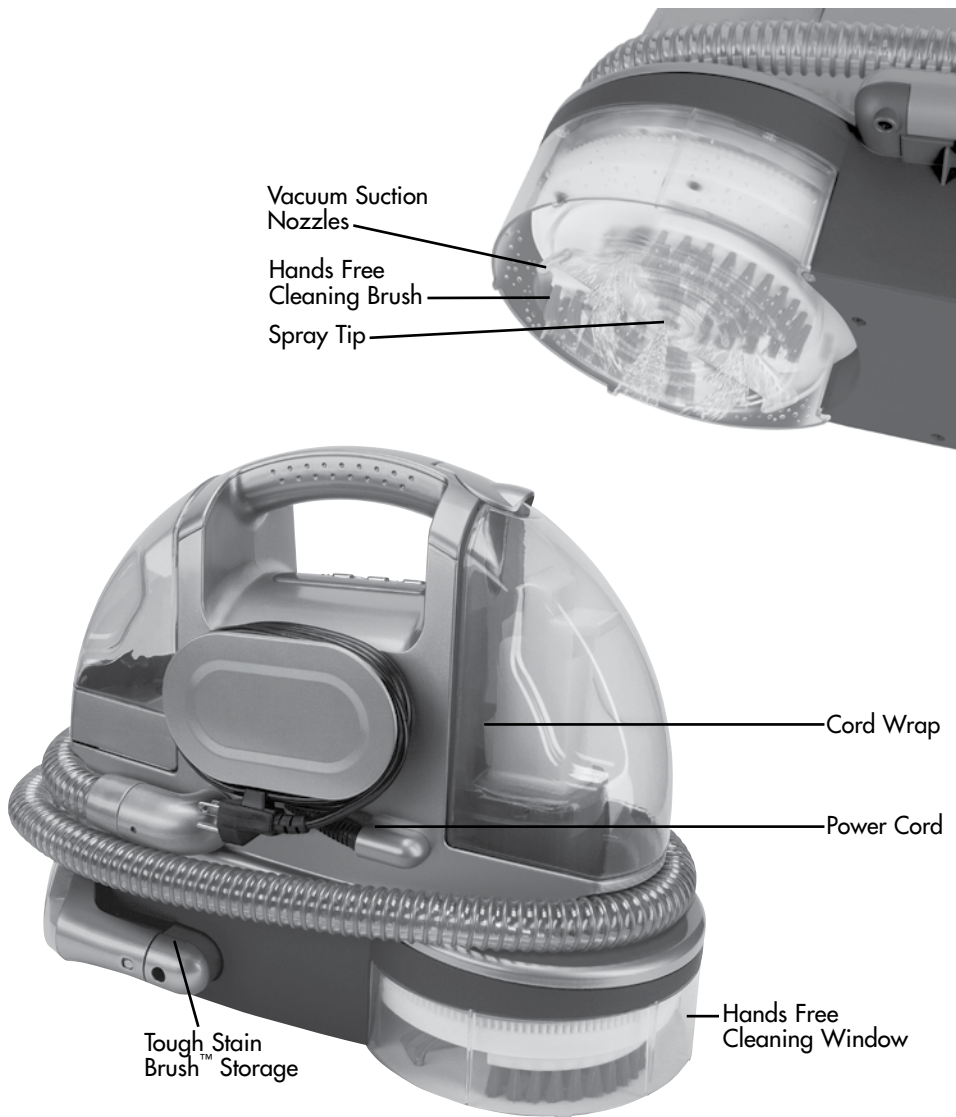

Operations

Special features front view

Clean water/solution tank

Looking at the front of the unit, the clean water/solution tank is on the right side. It holds the clean water and formula.

Automatic Smart System™ control panel

Located on top of the unit, you will find the control panel. Select the cleaning cycle you would like to use (detailed instructions on page 8).

Dirty water/collection tank

Looking at the front of the unit, the dirty water/collection tank is on the left side. It holds the dirty water that is suction up

Vacuum flex hose

Wraps around the center of the unit, and serves as the travel path for dirty water and formula suctioned into the dirty water/collection tank.

Tough Stain Brush™

Attach to the end of the hose for cleaning in manual mode.

Spray trigger

When cleaning in the manual mode, press the spray trigger to release water and formula onto the area to be cleaned.

Special features underside view

Handsfree cleaning brushes

Provides cleaning action when using the surface stain or set-in handsfree cleaning cycles.

Spray tip

Water and formula are dispensed here when cleaning in the handsfree mode.

Suction nozzles

Provides suction path for dirty water and formula when using the handsfree cleaning cycles.

Special features back view

Cleaning window

Provides an area to see the handsfree cleaning action.

Tough Stain Brush™ Storage

The Tough Stain Brush is conveniently stored on board.

Operations

Special features back view continued

Power cord

Stores on the back of the unit, around the oval cord wraps.

NOTE: Unwrap power cord completely before operating the unit.

Cord wrap

Serves as a guide for the power cord storage. It can be gently pushed in during use.

Microban® antibacterial protection

Microban antibacterial protection helps prevent the growth of harmful common household bacteria including *E. coli*, *Salmonella* and *Staph.a*. It helps to keep the unit fresher and cleaner between uses.

Getting ready

1. To fill the clean water/solution tank:
 - A. Remove the clean water tank by lifting it straight up and then away from the unit.
 - B. Unscrew the cap/insert at the bottom of the clean water tank.



There are 2 ways you can fill and use the tank:

2. **For common stains** such as dirt, grime, pet or oily stains, use the fill lines on the left side of the tank and fill with BISSELL 2X formula for compacts (trial size included) and water.
3. **For dye based** stains such as coffee, fruit juices, cola and red wine, use the fill lines on the right hand side of the tank and fill with BISSELL 2X formula for compacts and Oxy GEN2™ formula (trial sizes included) and water.
4. Tighten black cap/insert on bottom of clean tank and replace.



Tip:

Dry vacuum the area first, before spot cleaning with the Healthy Home Spot clean.



WARNING:

Do not use without tanks in place.

Operations

How to begin

Using the Automatic Smart System™

Your new Healthy Home Spot Clean features an Automatic Smart System that takes the guesswork out of spot and stain removal. With the touch of a button, you can select the cleaning cycle to use your preferred method of cleaning.

- 1. Surface Stain Cycle** This cycle has been designed for stains that are on the surface of your carpeting. This cycle will run for approximately 3 minutes.
- 2. Set-In Stain Cycle** Use on stains that have had a period of time to set-in. These are typically the most difficult stain types to remove. This cycle runs for approximately 6 minutes.
- 3. Manual/Hose** By selecting this option you can clean spots and stains manually on surfaces such as upholstery, stairs, car interiors, or any other hard to reach area.
- 4. Pause/Resume** If you press the pause/resume button once, it will pause the cleaning cycle. Press again to resume your current cleaning cycle.
- 5. Stop** By pressing the red stop button, you will stop the cleaning cycle completely. To begin cleaning again, you will need to start over and select a cleaning cycle.
- 6. Status Indicator Lights** These lights give you a visual update on the cleaning cycle. During a cleaning cycle you will hear changes in the sound of the machine that correspond with a given step. When your cleaning cycle is complete, the Finish light will illuminate and you will hear a "beep" every five seconds until you press the stop button.



Tip:

Some spots and spills require that you pick up the chunky debris with a rag or towel before you begin cleaning in the automatic or manual cycles.

Operations

To begin cleaning

1. Place the filled clean water/solution tank onto the unit.
2. Plug your Healthy Home Spot Clean in. The power light will illuminate, indicating your Healthy Home Spot Clean is ready to go.

Automated cleaning

1. Place the unit directly over the spot or stain, making sure the stain is in the center of the cleaning area.
2. Select which cleaning cycle (surface stain or set-in stain) you would like to use. Healthy Home Spot Clean will begin spraying, brushing and suctioning the soiled area, in a pre-programmed cycle. Both cycles have been tested and proven to deliver superior cleaning results, taking the guesswork and effort out of cleaning for you.
3. When the cleaning cycle you have selected is complete, the Healthy Home Spot Clean will beep. The beep will continue until you press the **STOP** button.
4. Pick up the unit and check the area that was cleaned.
5. If you use Oxy GEN2, it will continue to work for the next six to eight hours, cleaning your spots and stains all the way to the backing of the carpet.

Tip:

If the unit accidentally tips or is tilted, the handsfree cleaning brushes will stop.

Tip:

Some difficult stains may require that you run the cleaning cycle a second time.

Operations

Manual cleaning

1. Remove the hose from the unit by depressing the release button.
2. **A.** Remove the Tough Stain Brush from the back of the unit.
B. Attach the Tough Stain Brush onto the grip of the hose.
3. Select the hose button on the control panel to start the Healthy Home Spot Clean.

NOTE: In manual mode, the Healthy Home Spot Clean will not turn on until the hose is disconnected from the hose connector. If it is not removed within 30 seconds of pushing the hose button, the unit will shut off.

4. Begin cleaning by holding the tool no more than 15 cm above the soiled surface. Depress the spray trigger for about 5 seconds to apply the cleaning solution to the soiled area. Release the spray trigger. Be careful not to overwet.
5. Using the brush on the tool, gently scrub the soiled area until it appears to be clean.
6. To suction up the dirt and cleaning solution, position the suction nozzle over the cleaned area, apply downward pressure on the tool, and pull nozzle toward you. You should see the dirty solution pass through the nozzle. Continue until no more solution can be removed.

NOTE: In manual mode, the Healthy Home Spot Clean is equipped with a safety feature which will shut the unit off after 30 minutes. Press start to resume cleaning.

7. If the stain is still visible, repeat steps 4-6 as necessary.
8. When the cleaning is complete, lightly drag the suction nozzle across the stain to further aid in drying the cleaned area.
9. Before turning off the Healthy Home Spot Clean, suction up clean water to thoroughly rinse out the inside of the vacuum flex hose. Then, lift the vacuum flex hose upwards to drain any remaining water into the dirty tank.


1.



2A.



2B.

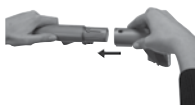

Tip:

One of the effective stain removing ingredients in Oxy Gen2 is Hydrogen Peroxide. Certain people may be affected by the formula when it comes into contact with their skin; it may turn the skin white and/or cause tingling. Washing your hands after use and applying hand lotion will remove any possible white discoloration.

Tip:


Check upholstery stuffing before cleaning. Colored stuffing may bleed through the fabric when it becomes wet.

Operations

Manual cleaning continued

10. Press the STOP button to turn off the Healthy Home Spot Clean.
11. Disconnect the cleaning tool from the vacuum flex hose by pushing down on the button lock and pulling straight off (do not twist tools to remove them).
12. Once the tool is removed from the hose it should be rinsed under clean running water. When thoroughly dried, place back into the storage area.

11.

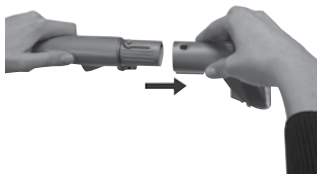


Tip:

If a significant amount of water and formula remains in the clean tank, your unit can be stored with liquid in the clean tank. However, if you have added Oxy GEN2 into the clean tank, fresh Oxy GEN2 should be added prior to the next use to optimize performance.

Storage

1. Unplug the power cord from the outlet. Wrap power cord around the cord wrap.
2. Empty and rinse the dirty water/collection tank after each use, or when dirty water reaches the indicated maximum fill line. To remove the dirty tank, lift up the dirty tank latch and pull the tank out. Dump out the dirty water and rinse. Replace the dirty tank into the unit for storage. After using the Healthy Home Spot Clean's automated feature, wipe the window and brushing area with a soft cloth.
3. If you were using your Healthy Home Spot Clean manually, wrap the vacuum flex hose around the unit and secure the hose into the hose connector on the front of the unit.
4. Store unit indoors at room temperature (4° to 43°C).

2.

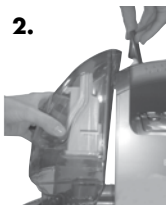

3.



Tip:

Periodically clean out the black valve inside of the dirty water/collection tank.

Troubleshooting

Automated cleaning

Healthy Home Spot Clean will not run

Possible causes

1. Power cord not plugged in
2. Vacuum flex hose is not snapped into place securely

Remedies

1. Check electrical plug
2. Check to make sure the vacuum flex hose is snapped into place

Unusual or odd noise

Possible causes

1. Clean water/solution tank is out of solution

Remedies

1. Fill clean water/solution tank

Reduce or no spray

Possible causes

1. Clean water/solution tank is out of solution
2. Clean water/solution tank is not inserted into the unit securely
3. Spray tip clogged

Remedies

1. Fill clean water/solution tank
2. Gently press the clean water/solution tank until you see "bubbles" coming from the base of the tank
3. Clean spray tip

No suction

Possible causes

1. Dirty water/collection tank is full
2. Dirty water/collection tank latch is not down
3. Black valve on the dirty water/collection tank is missing

Remedies

1. Empty dirty water/collection tank
2. Push latch down securely into place
3. Replace black valve into dirty water/collection tank

Troubleshooting

Manual cleaning

Cleaner will not run

Possible causes

1. Power cord not plugged in
2. Hose not removed from receiver
3. Healthy Home Spot Clean shut off automatically during use

Remedies

1. Check electrical plug
2. Remove hose
3. Press START button to resume manual cleaning

Unusual or odd noise

Possible causes

1. Clean water/solution tank is out of solution

Remedies

1. Fill clean water/solution tank

Reduce or no spray

Possible causes

1. Spray tip clogged on Tough Stain Brush
2. Clean water/solution tank is out of solution
3. Clean water/solution tank is not inserted into the unit securely

Remedies

1. Clean spray tip
2. Fill clean water/solution tank
3. Gently press the clean water/solution tank until you see "bubbles" coming from the base of the tank

No suction

Possible causes

1. Dirty water/collection tank is full
2. Dirty water/collection tank latch is not down
3. Black valve on the dirty water/collection tank is missing

Remedies

1. Empty dirty water/collection tank
2. Push latch down securely into place
3. Replace black valve into dirty water/collection tank

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Please do not return this product to the store.

Replacement parts -

Item	Part No.	Part Name
1	203-6643	Clean/Solution Tank Assembly (includes Cap/Insert)
2	203-6644	Clean/Solution Tank Cap/Insert
3	203-6645	Dirty/Collection Tank
4	203-7654	Hose Clip

1



2



3



4




Accessories

While not all of these parts may not have come with your machine, all are available to you for purchase, if desired.

Item	Part No.	Part Name
1	203-7657	3" Tough Stain Brush
2	203-6652	TurboBrush™
3	203-6653	4" Upholstery Tool
4	203-6654	6" Wide Stair Tool
5	203-6655	Spraying Crevice Tool
6	203-6647	Storage Tray
7	79B9E	473 mL 2X Little Green for Compacts Formula
8	74R7E	473 mL 2X Pet Stain for Compacts Formula
9	0801E	946 mL Oxy GEN2™

 1




2



3



 4



5



6



7



8



9



Warranty - BISSELL Healthy Home Spot Clean®

This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by telephone, or regular post as described below, or contact your local in country distributor.

Limited One Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL Homecare, Inc., will replace (with new or remanufactured components), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part do to manufacturers defect.

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, or use not in accordance with the User's Guide is not covered.

For UK inquiries:

Monday - Thursday 9 am — 5 pm
Friday 9 am — 4 pm

BISSELL Homecare (Overseas) Inc.

The Boat Yard
105 Straight Road
Old Windsor
Berkshire, SL4 2SE
United Kingdom
Telephone: 0844-888-6644

For all other inquiries:

Monday - Friday 8 am — 4 pm

BISSELL Homecare, Inc.

PO Box 1888
Grand Rapids, Michigan 49501 USA
Telephone: 01-616-453-4451
Fax: 01-616-453-1383

BISSELL HOMECARE INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.



For information about repairs or replacement parts, or questions about your warranty, call:
Or visit the BISSELL website - **www.bissell.com**

For UK inquiries:

Monday - Thursday 9 am — 5 pm
Friday 9 am — 4 pm

BISSELL Homecare (Overseas) Inc.

The Boat Yard
105 Straight Road
Old Windsor
Berkshire, SL4 2SE
United Kingdom
Telephone: 0844-888-6644

For all other inquiries:

Monday - Friday 8 am — 4 pm

BISSELL Homecare, Inc.

PO Box 1888
Grand Rapids, Michigan 49501 USA
Telephone: 01-616-453-4451
Fax: 01-616-453-1383

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 15 for details.



Experts In Home Cleaning™

©2010 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4288
Rev 10/10
Visit our website at:
www.bissell.com
Microban® is a registered trademark
of Microban Products Company

